

Operations Manual



Jack Block

GJB0001



CAUTION:

Before using this product, read this manual and follow all its Safety Rules and Operating instructions.

Gorilla Offroad Company, Plainfield, IL 60586

Visit our website: www.gorillaoffroad.com

TABLE OF CONTENT

Warranty	1
Save These Instructions	1
Warning	1
For your Safety	1
Operation	2

PROFESSIONAL WARRANTY

If this product fails due to a defect in material or workmanship within one year from the date of purchase, return it for free replacement.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

SAVE THESE INSTRUCTIONS

For your safety, read, understand, and follow the information provided with this jack block.

- The owner and operator of this equipment shall have an understanding of this jack block and safe operating procedures before attempting to use. The owner and operator shall be aware that use and repair of this product may require special skills and knowledge. Jack Block instructions and safety information must be conveyed in jack block operator's native language before jack is used. If any doubt exists as to the safe and proper use of this jack block, remove from service immediately.
- Inspect before each use. Do not use if broken, bent, cracked, or damaged parts are noted. Any jack block that appears damaged in any way, or operates abnormally, shall be removed from service immediately.
- If the jack block has been or suspected to have been subjected to a shock load (a load dropped suddenly, unexpectedly upon it), immediately discontinue use until jack block has been checked by a Gorilla Offroad Company.. It is recommended that an annual inspection be done by qualified personnel.

WARNING

- Study, understand, and follow all instructions with this device before operating this device.
- Do not exceed rated capacity.
- Use only on hard, level surface.
- This is a lifting device only. Immediately after lifting, support the vehicle with appropriately rated vehicle stands.
- Do not move or dolly the vehicle while on the jack block.
- Ensure the Jack Block is not the path of least resistance – make sure the lifting jack is capable of rolling/moving as the hack is raised and/or lowered.
- Failure to heed product markings or warnings may result in personal injury, death, or property damage.
- To avoid crushing and related injuries:
 - NEVER work on, under or around a load supported by a jack block.
 - ALWAYS use adequately rated jack stands.

FOR YOUR SAFETY

Be sure all tools and personnel are clear before lowering load. No alterations shall be made to this product. Only attachments and/or adapters supplied by the manufacturer shall be used. Lift only on areas of the vehicle as specified by the vehicle manufacturer.

NOTE: Jack stands are rated per pair unless otherwise noted.

Use 1 matched pair per vehicle only.

OPERATION

Place the flat end or base of the Jack Block on a flat, level jack plate or one that covers at least three(3) inches of the base of the block. Raise the jack until it is about two(2) inches from the pinch weld and at the location specified by the car manufacturer to be the designation jack point. Arrange the Jack Block so the vehicle's pinch weld is lined up with the Jack Block Pinch Weld Slot. Slowly raise the jack while making sure the Jack Block stays lined up correctly. Once the pinch weld is in the pinch weld seam, continue to slowly raise the jack and the vehicle. While raising the vehicle, if the Jack Block begins to slide on the vehicle or the jack itself, stop raising the vehicle and lower the jack so the jack or Jack Block can be repositioned. Inspect the jack to make sure the wheels provide enough movement as to not impede in the raising of the vehicle safely. Inspect the Jack Block to make sure it is level when coming in contact with the vehicle.

Continue to lift the vehicle slowly with the jack, continuously checking the Jack Blocks for movement. The block can raise the vehicle using the pinch weld, the rocker panels on either side of the pinch weld, or both if the geometry matches up.

When the vehicle has safely reached the height needed to safely maneuver appropriately rated jack stands in place, do so immediately as instructed by the jack stand operations manual. Be sure to read your floor jack Operators Manual as well.

GORILLA OFFROAD COMPANY

P.O. Box 1431 | Plainfield, IL 60544 | www.gorillaoffroadcompany.com